

## Cannot hear audio using Easy LP to MP3

• Corel Other

If you cannot hear the LP or tape as it is being recorded in Windows Vista or Windows 7 follow these steps to fix the problem:

- 1. Plug your headphones or computer speakers into the Line Out port on the Roxio Audio Capture USB box.
- 2. Click on the Windows Start button, and select Control Panel.
- 3. Click Hardware and Sound > Sound. (If you have the Control Panel set to Classic View in Windows Vista or set to one of the Icon views in Windows 7, select Sound.)
- 4. Select the speakers connected to the USB Multimedia Audio Device, and click Properties.
- 5. Click the Levels tab.
- 6. Set the Mute/Unmute button (speaker icon) to unmute so there isn't a red circle with a line in the button. Now you can djust the volume to the desired level.
- 7. Click OK.

© 1985-2024 Corel. All rights reserved.