

The 700 PCI exports left channel audio only

• Pinnacle Legacy

When exporting using the audio out connections on the 700-PCI, the audio the left audio channel is heard while the right audio channel is not. A workaround for this is to use your sound card's audio out instead of the 700-PCI.You can do this by connecting the audio cables to the audio out ports on your sound card and then going to Setup - Make Tape in Studio and setting Audio pull-down to your system audio.

© 1985-2024 Corel. All rights reserved.