



Cannot hear audio using Easy LP to MP3

- Corel Other

If you cannot hear the LP or tape as it is being recorded in Windows Vista or Windows 7 follow these steps to fix the problem:

1. Plug your headphones or computer speakers into the Line Out port on the Roxio Audio Capture USB box.
 2. Click on the Windows Start button, and select Control Panel.
 3. Click Hardware and Sound > Sound. (If you have the Control Panel set to Classic View in Windows Vista or set to one of the Icon views in Windows 7, select Sound.)
 4. Select the speakers connected to the USB Multimedia Audio Device, and click Properties.
 5. Click the Levels tab.
 6. Set the Mute/Unmute button (speaker icon) to unmute so there isn't a red circle with a line in the button.
Now you can adjust the volume to the desired level.
 7. Click OK.
-