



I am getting a High Pitched Sound or Squeal when I start VHS to DVD products

- Roxio Easy VHS to DVD Plus

I am getting a High Pitched Sound/Squeal when I start VHS to DVD Products

Symptom:

When I launch VHS to DVD products, I get high pitched sounds and/or squeals.

Solution:

This can be caused by your default recording device being set to your microphone and not the VHS to DVD USB device. You will need to bring up your "Recording Devices" in Vista/Win7, click on the 'Recording Tab" and make the "Line Roxio Video Capture USB" the default device. Once that is done, exit out of the VHS to DVD product and restart the computer.

?
